




SJ1003 (GW) MAIN

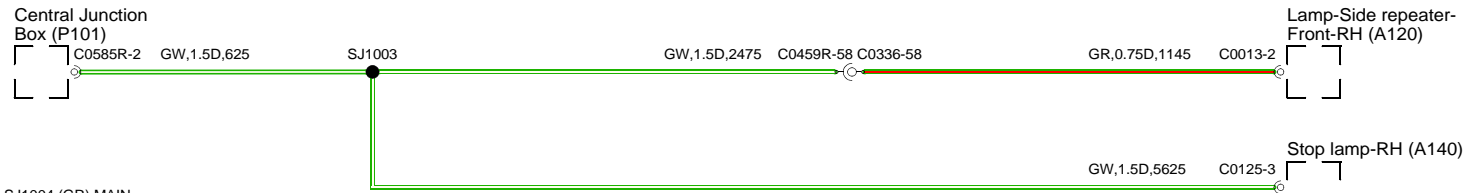

SJ1004 (GR) MAIN

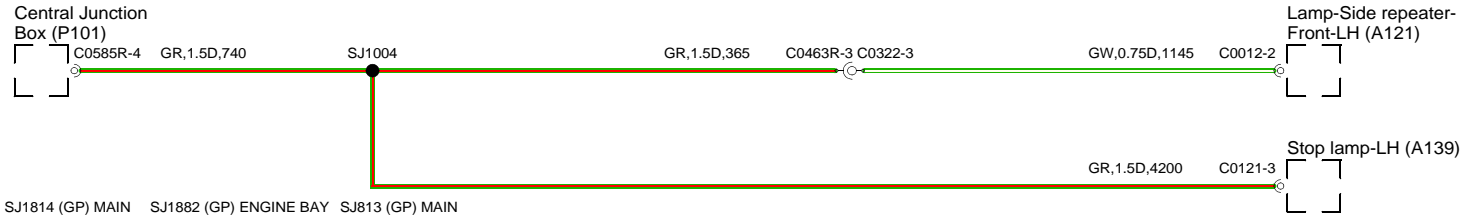


SJ1814 (GP) MAIN SJ1882 (GP) ENGINE BAY SJ813 (GP) MAIN

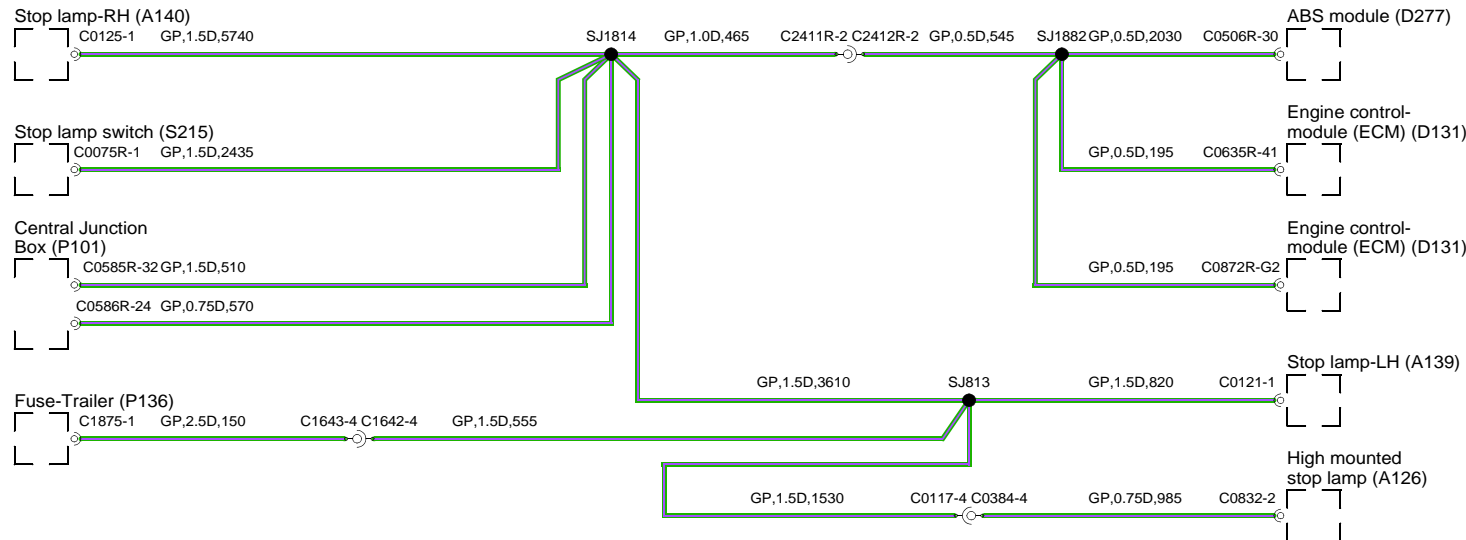


SJ7 (GN) MAIN

 Central Junction Box (P101)




Stop lamp-RH (A140)

 


SJ1011 (BG) MAIN

 Central Junction Box (P101)




SJ1012 (BP) MAIN

 Central Junction Box (P101)




 Motor-Central door-locking-Passenger (M237)









SJ1013 (BR) MAIN

 
Motor-Central door-locking-Passenger (M237)



Central Junction Box (P101)

      

SJ20 (RO) MAIN

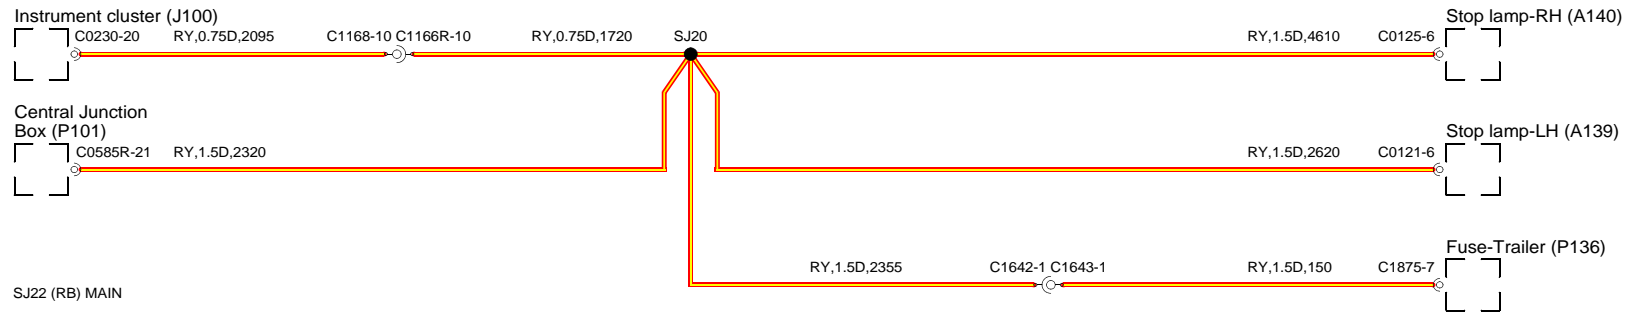


Lamp-Number plate and-tail door switch (A155)

SJ22 (RB) MAIN

Battery Junction Box (P108)




SJ1027 (YR) MAIN

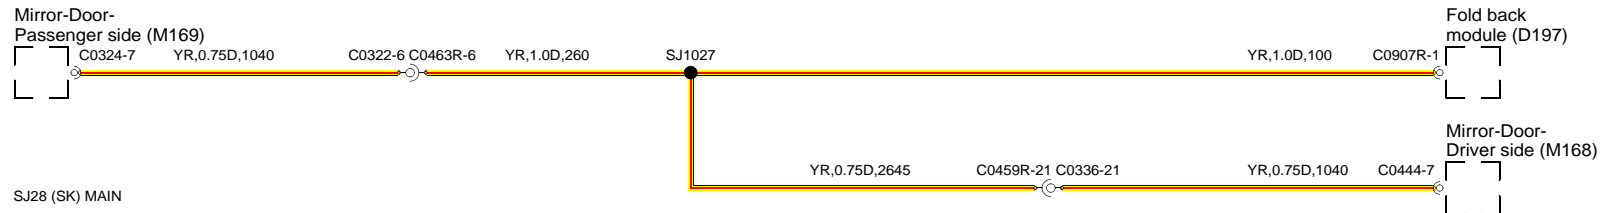


Central Junction Box (P101)




SJ1029 (R) MAIN

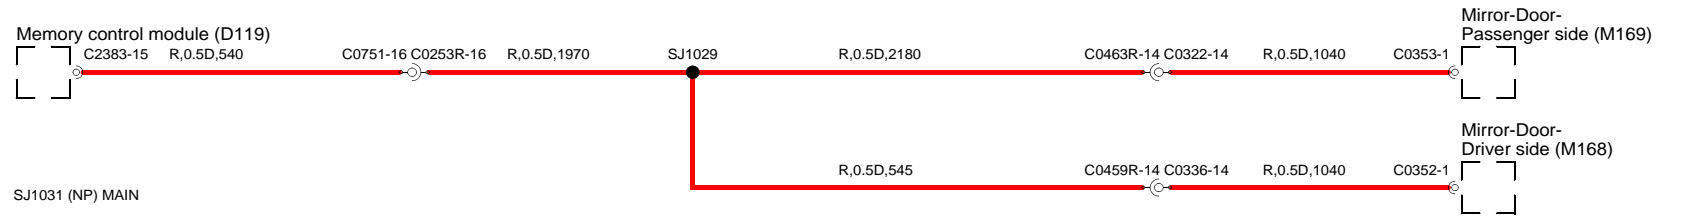


SJ1031 (NP) MAIN

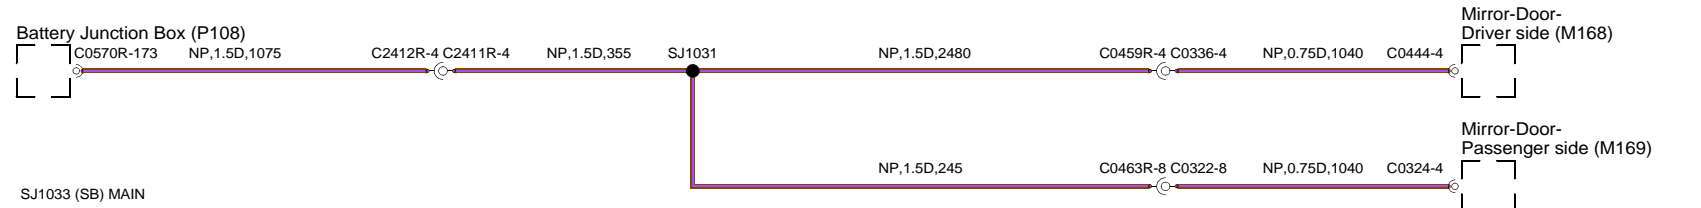


SJ1033 (SB) MAIN

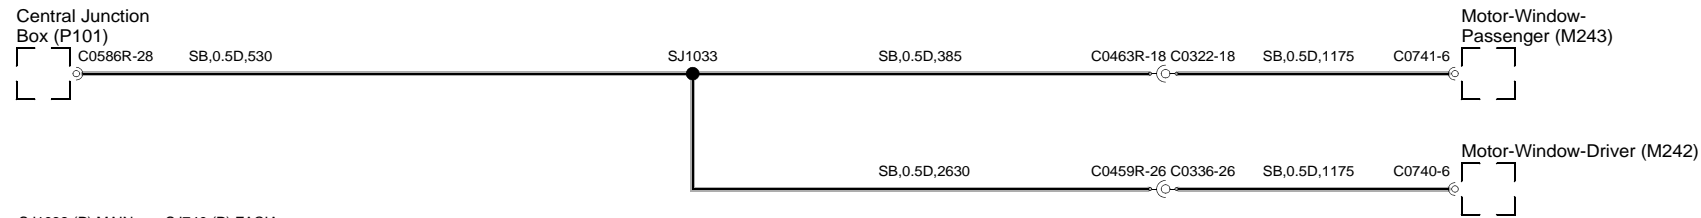


SJ1038 (P) MAIN SJ740 (P) FACIA

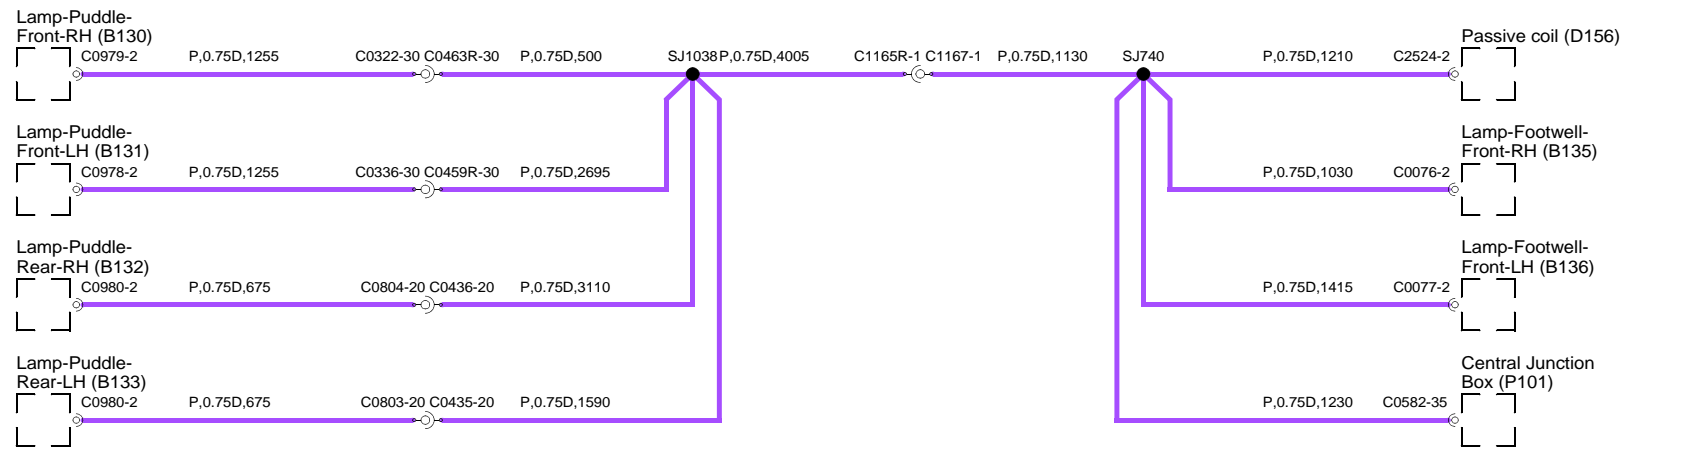


SJ235 (P) ROOF

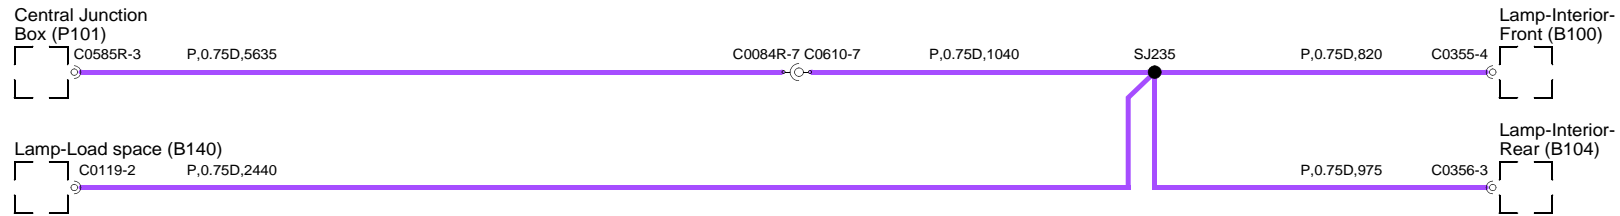


SJ1039 (PW) MAIN

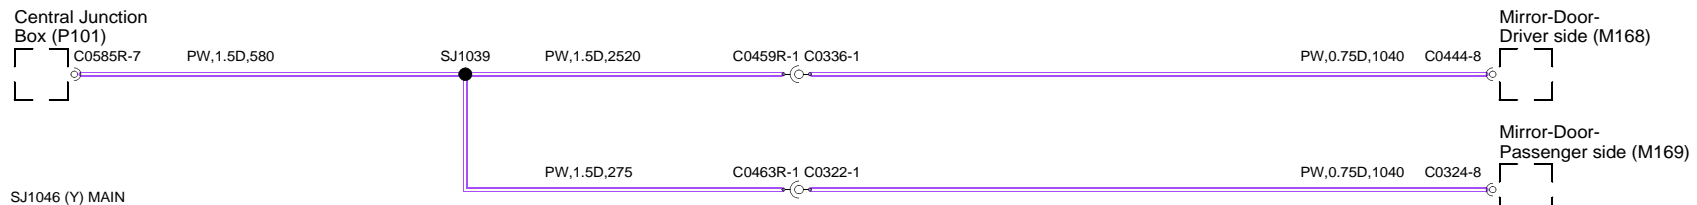



SJ1046 (Y) MAIN

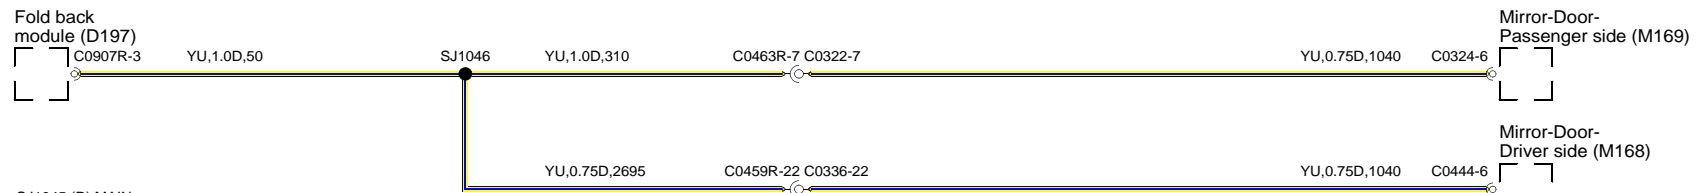

SJ1045 (R) MAIN

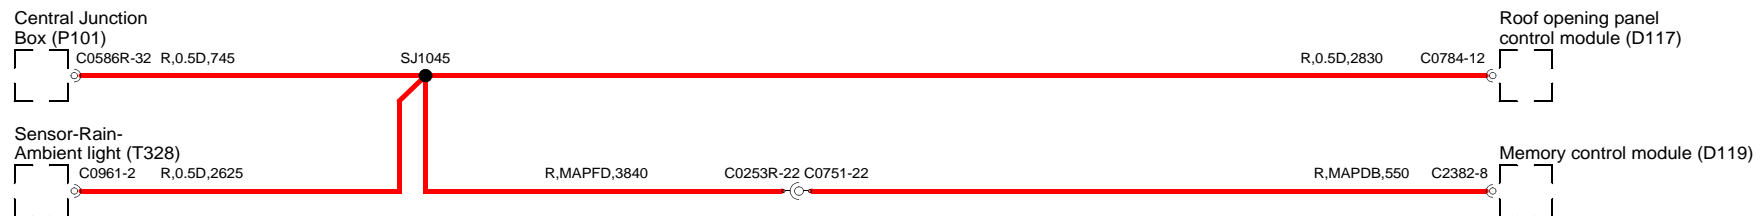


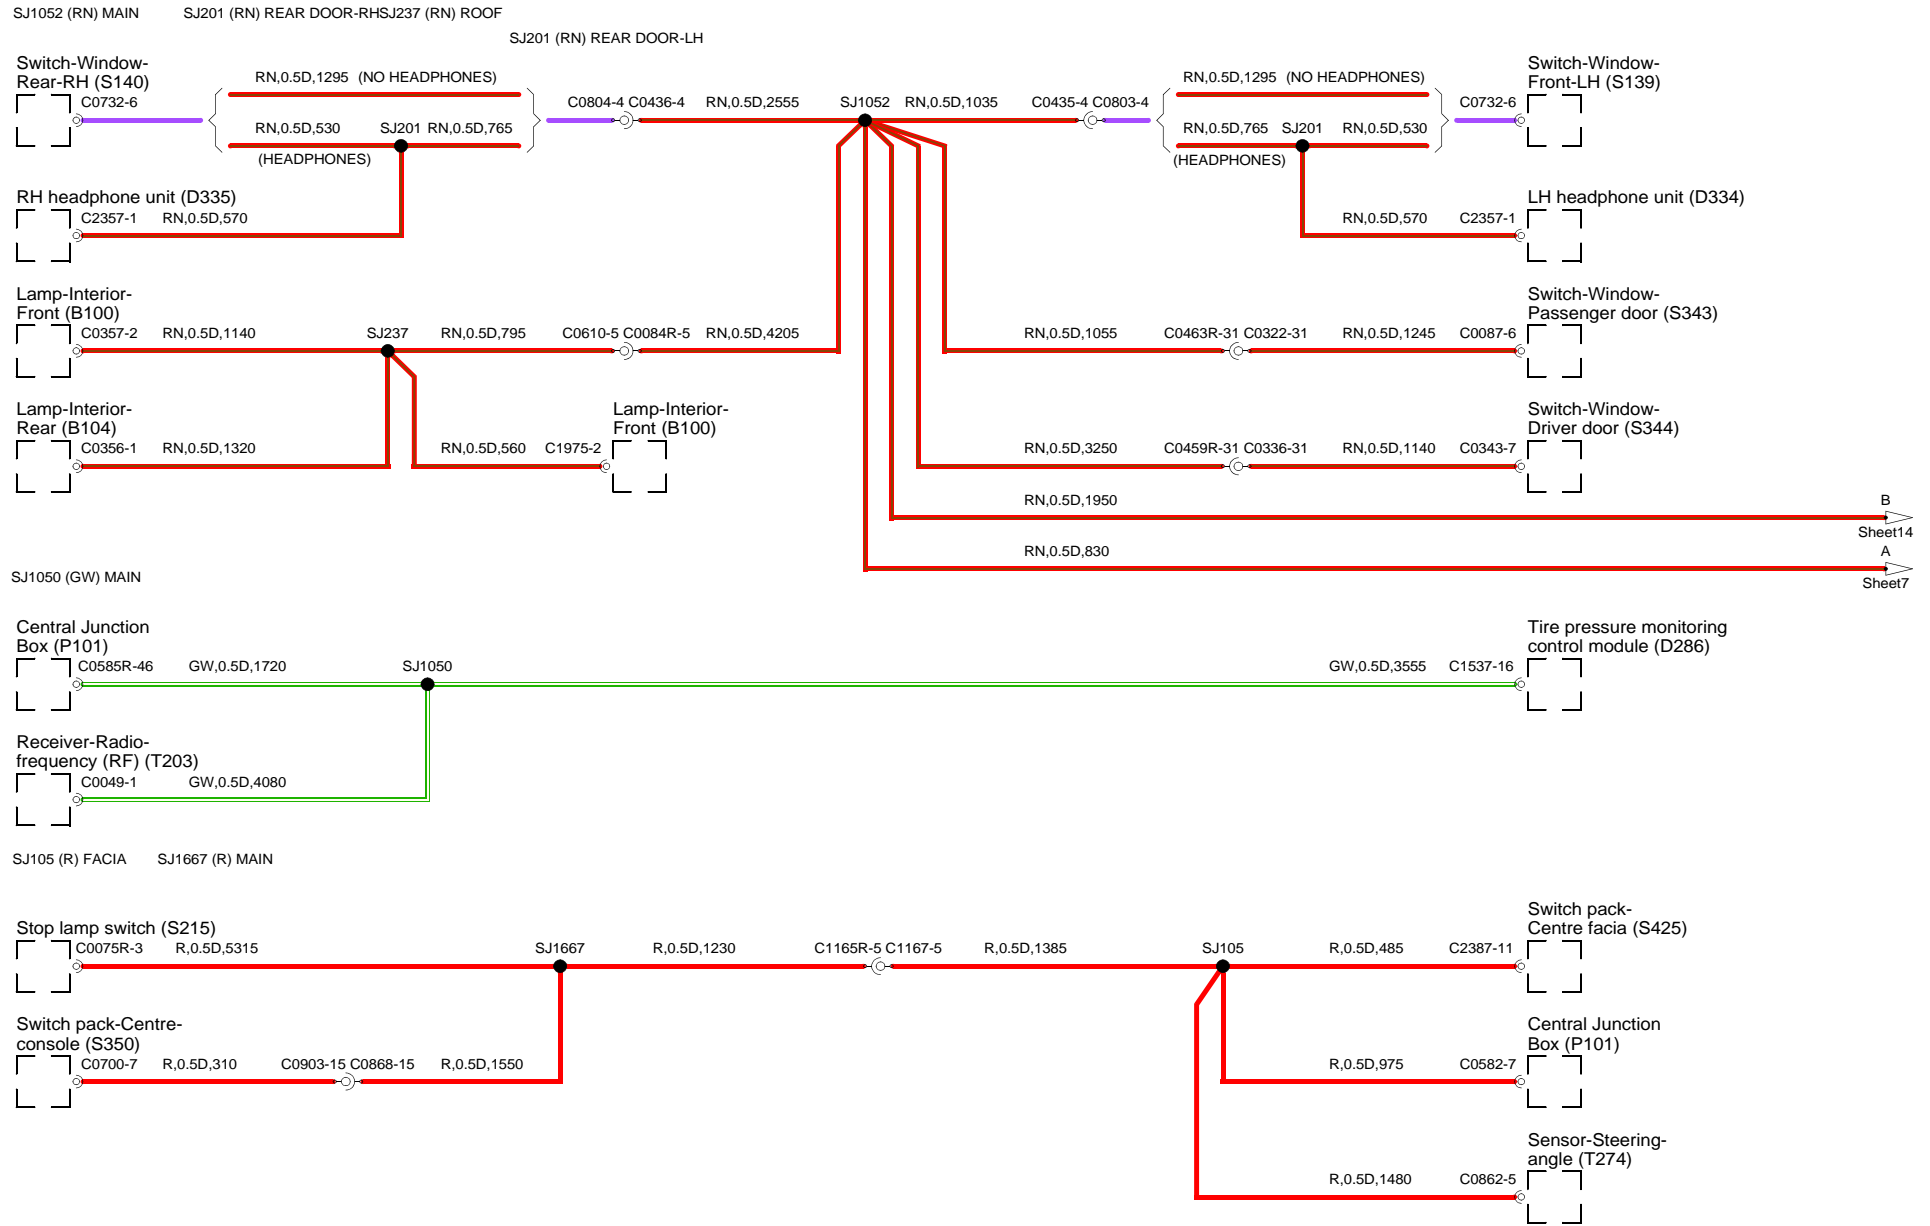

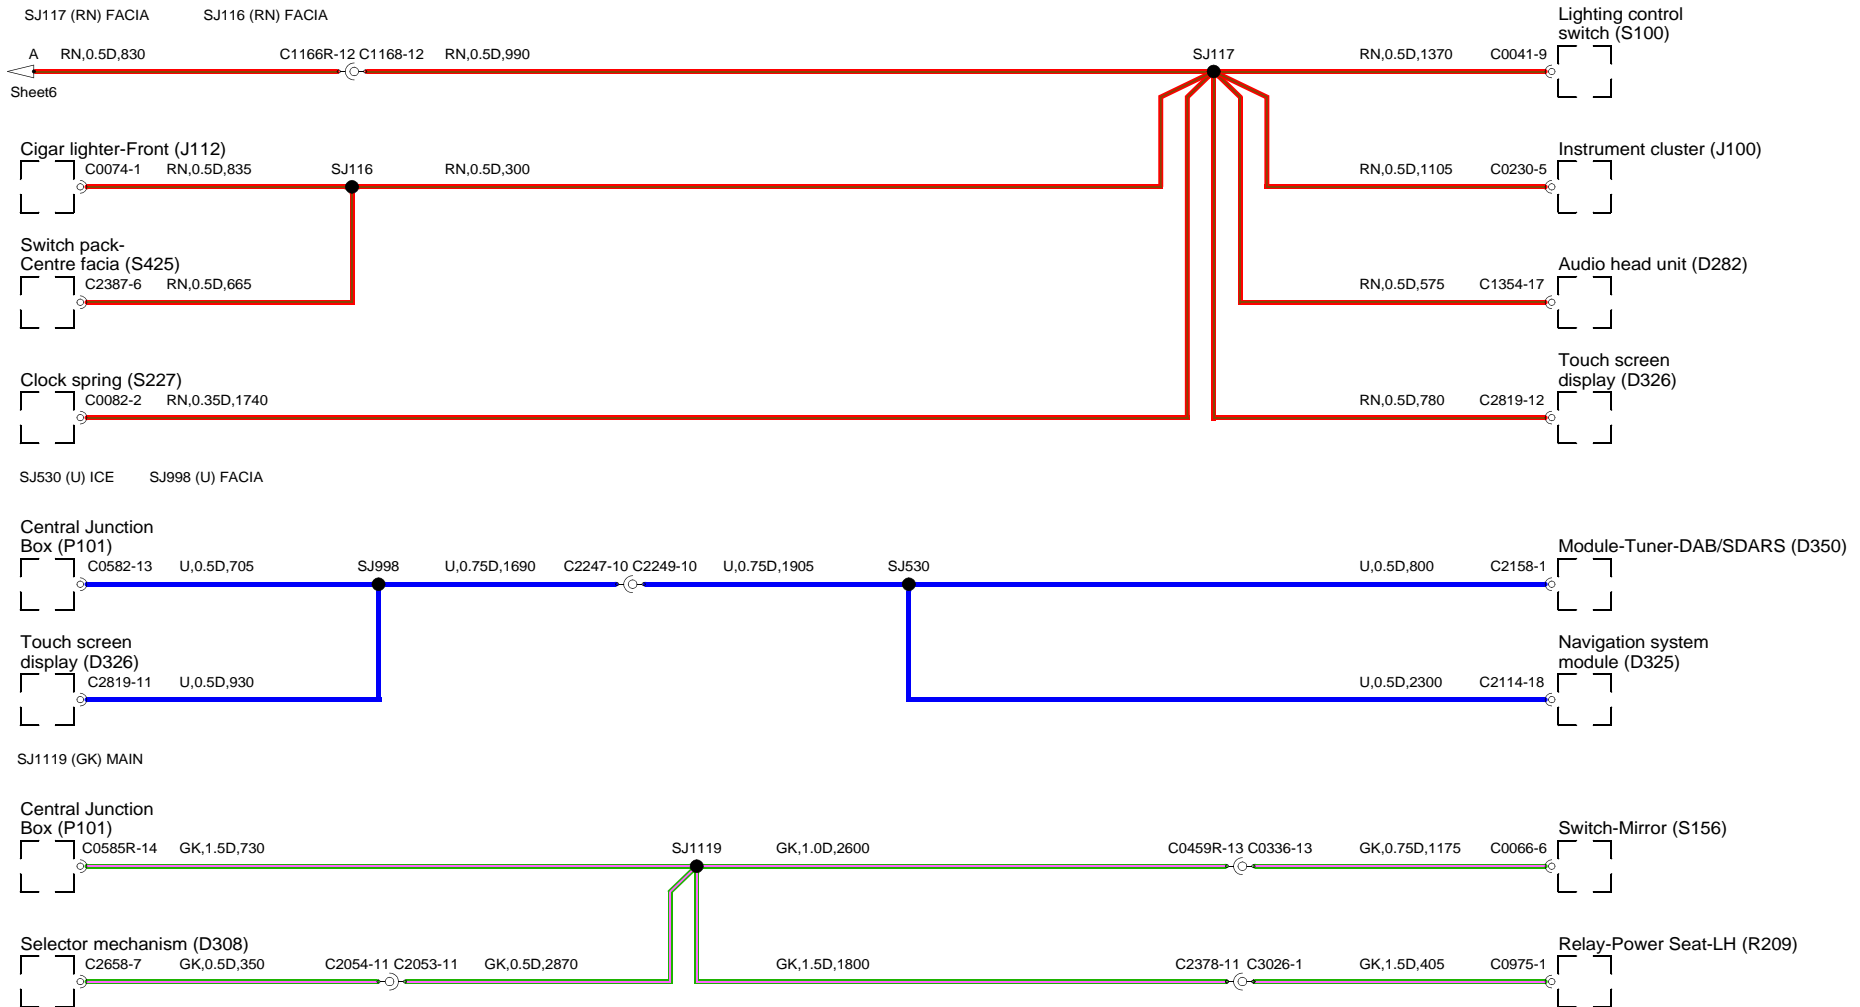


SJ131 (PU) FACIA

Central Junction Box (P101)

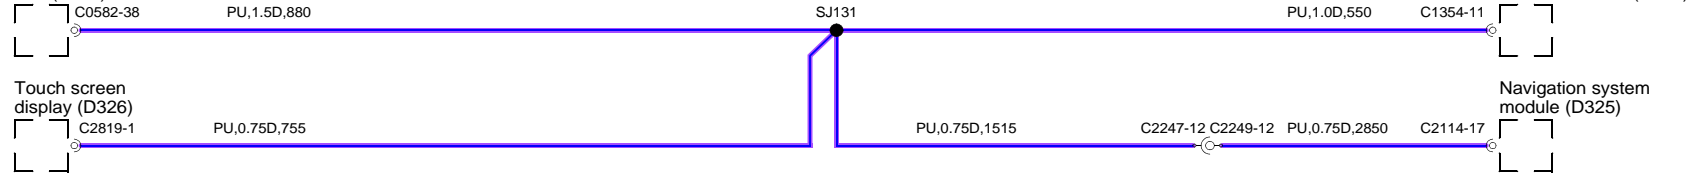

SJ170 (NY) ENGINE BAY


Battery Junction Box (P108)

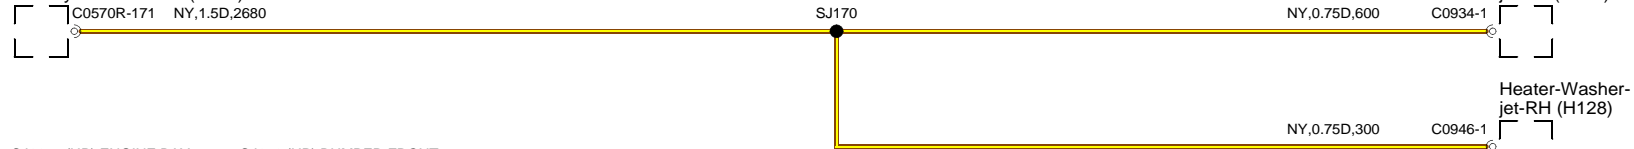

SJ1172 (UP) ENGINE BAY


SJ191 (UP) BUMPER FRONT

Lamp-Fog-Front-RH (A108)

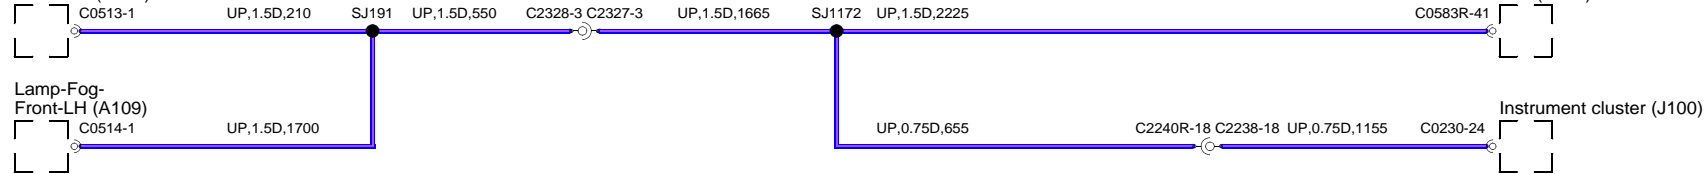


SJ1179 (LG) ENGINE BAY

Central Junction Box (P101)

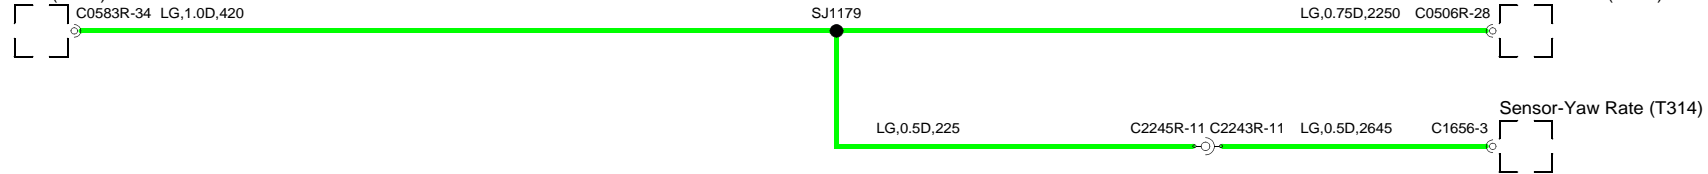

SJ1180 (YN) ENGINE BAY

 Lighting control switch (S100)



SJ1180

YN,0.5D,1945

C0011-5

Headlamp-RH (A100)

 
YN,0.5D,3385

C0009-5

Headlamp-LH (A101)

SJ1181 (RO) M.F.E.

Central Junction Box (P101)



SJ1181

RO,0.5D,3670

C0011-6

Headlamp-RH (A100)

 
RO,0.5D,1660

C0009-6

Headlamp-LH (A101)

SJ199 (G) FACIA

Central Junction Box (P101)



SJ199

G,0.5D,865

C0230-15

Instrument cluster (J100)

 
G,0.5D,605

C2387-2

Switch pack-Centre facia (S425)

SJ204 (GW) REAR DOOR-RH

Amplifier-Power-ICE (F142)



C0436-23

C0804-23

GW,MUH,740

SJ204

GW,MUD,190

C0310-1

Speaker-Mid range-Rear-RH (F166)

 
GW,MAQA,325

C0679-3

RH rear high range speaker (F162)

SJ204 (GW) REAR DOOR-LH

Amplifier-Power-ICE (F142)



C0435-23

C0803-23

GW,MUE,740

SJ204

GW,MUD,190

C0310-1


Speaker-Mid range-Rear-LH (F167)

GW,MAQA,325


C0679-3

LH rear high range speaker (F163)


SJ205 (G) REAR DOOR-RH

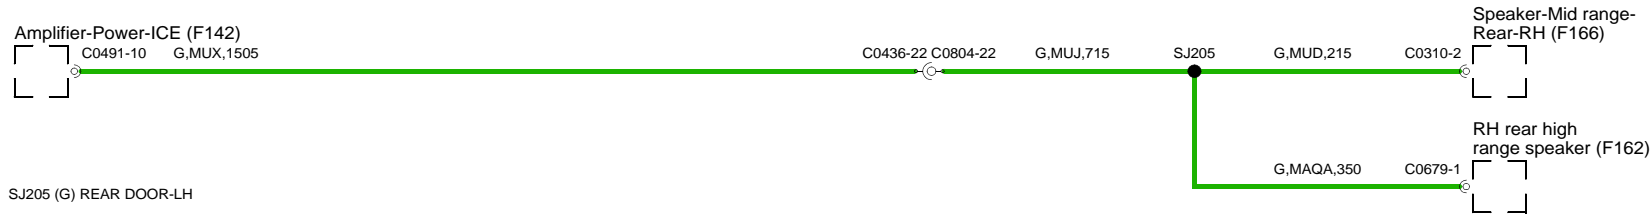


SJ205 (G) REAR DOOR-LH

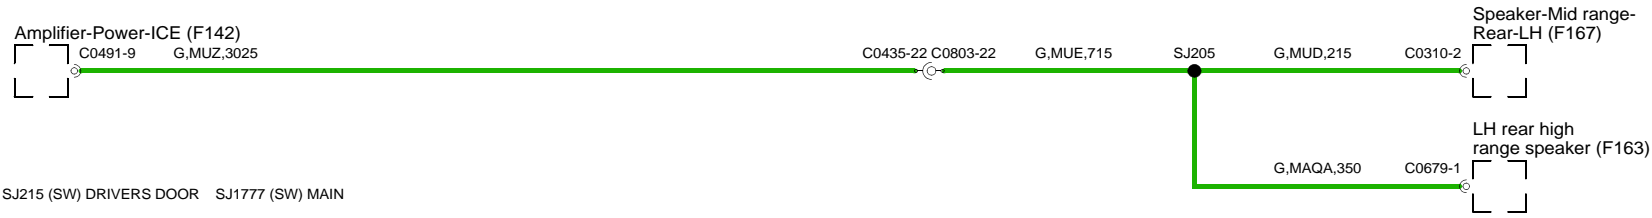


SJ215 (SW) DRIVERS DOOR SJ1777 (SW) MAIN

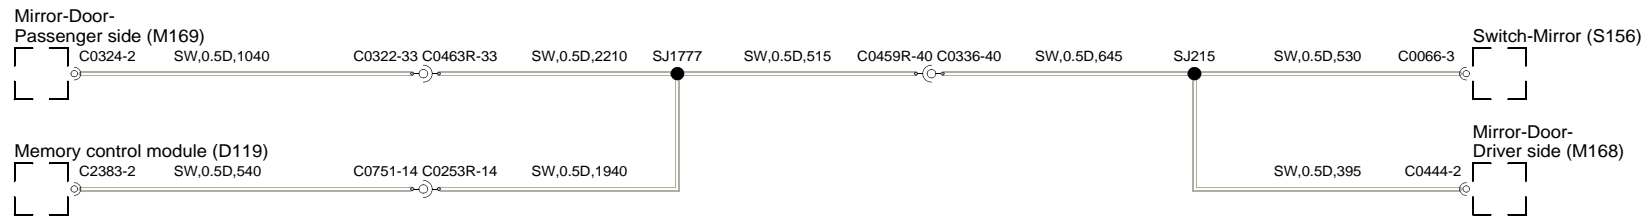


SJ217 (G) DRIVER DOOR

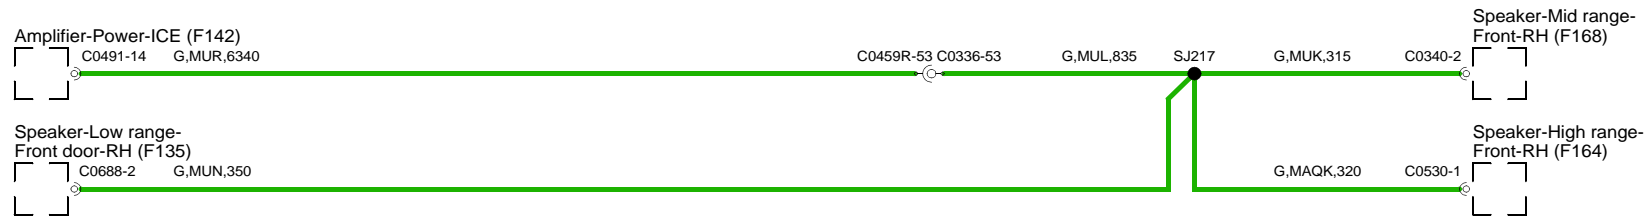


SJ218 (GW) DRIVER DOOR

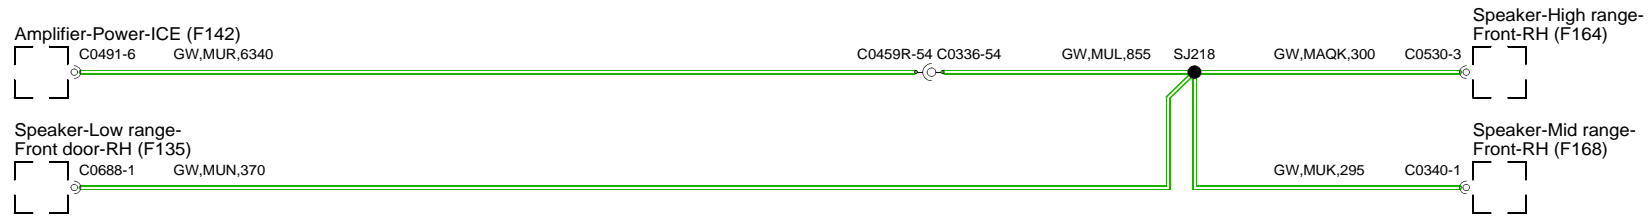


SJ225 (GW) PASSENGER DOOR

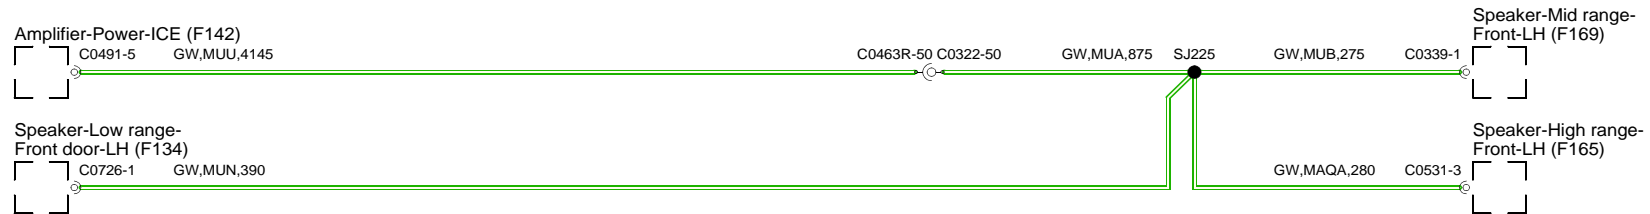



SJ226 (GW) PASSENGER DOOR

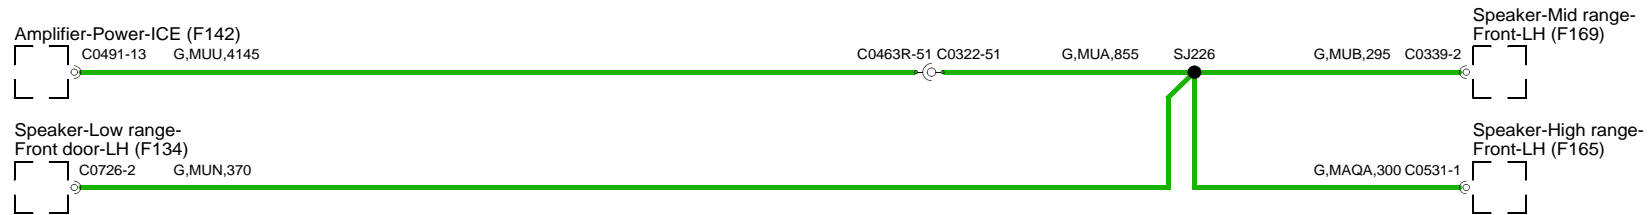


SJ1236 (R) ENGINE BAY

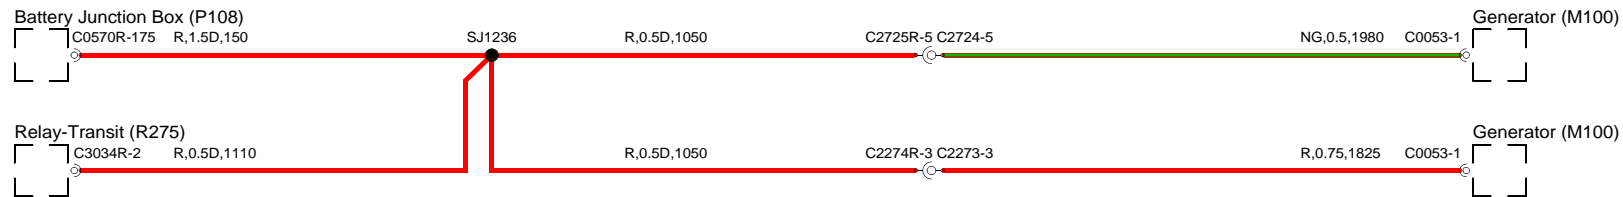

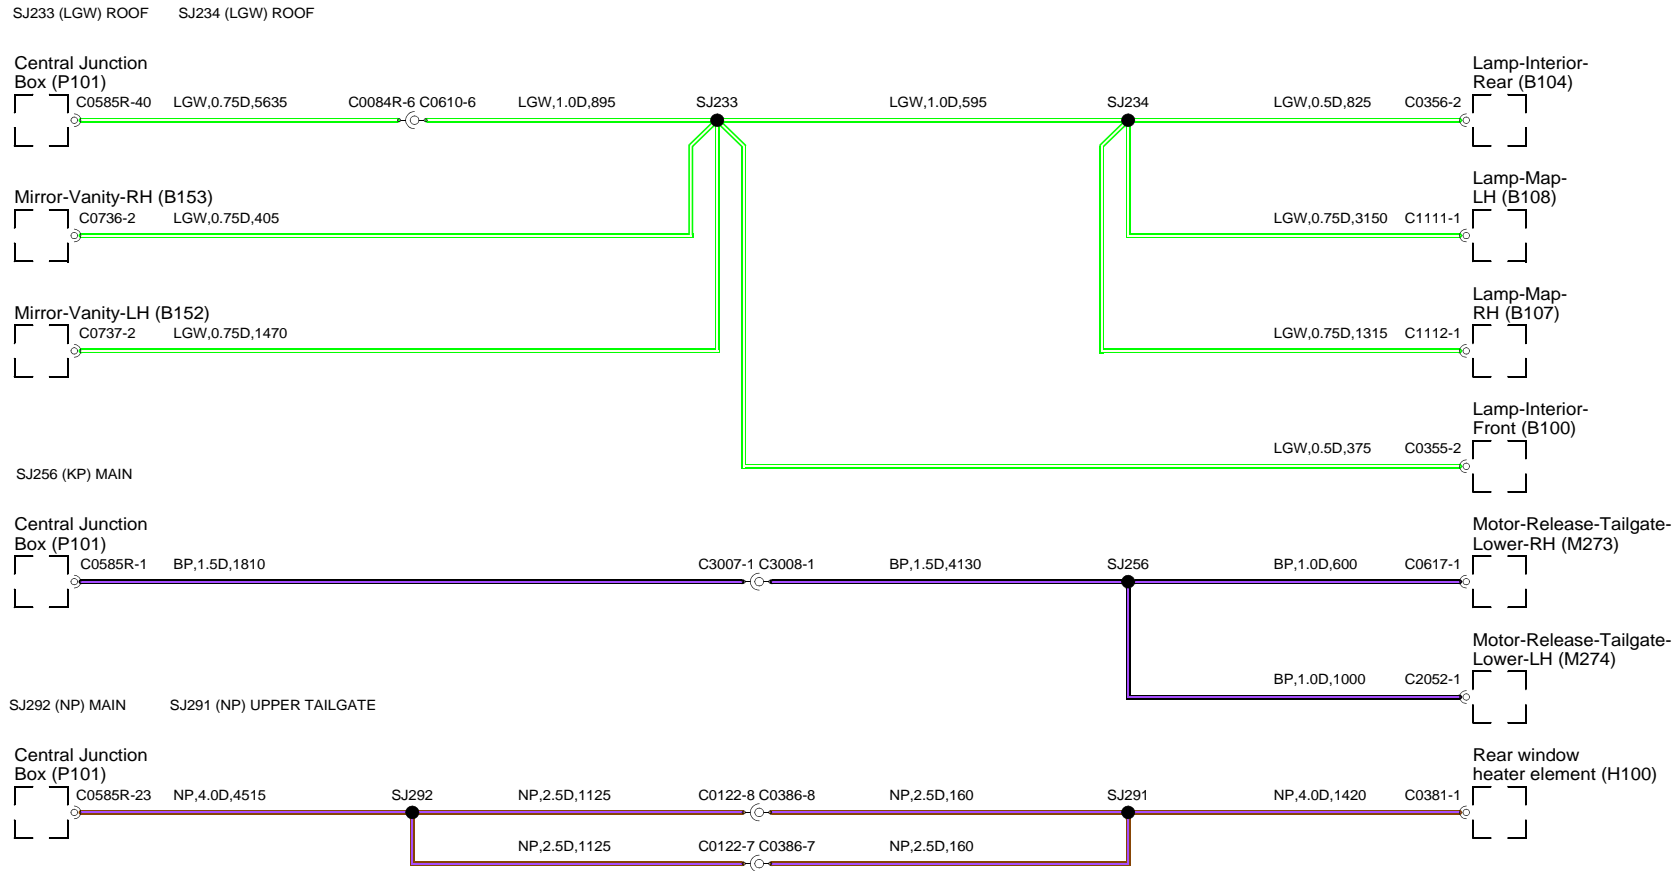

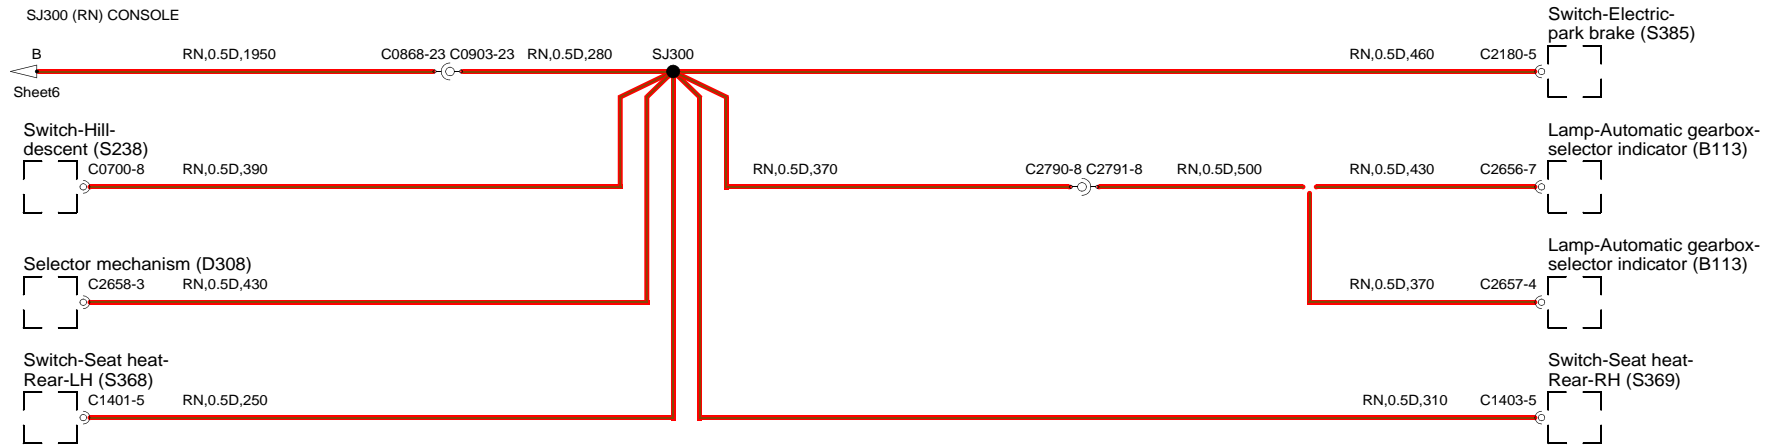

SJ591 (OG) FACIA SJ396 (OG) MAIN SJ2001 (OG) REAR AIRCON

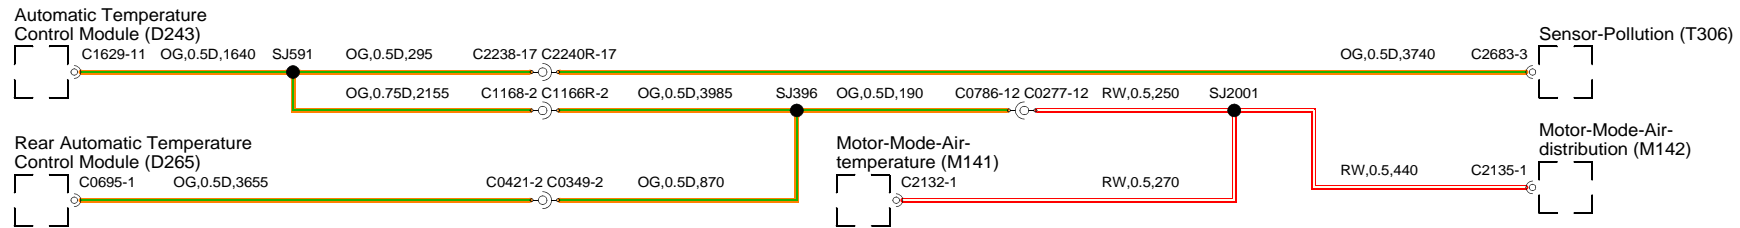

SJ 384 (YS) MAIN

 


SJ 385 (YS) MAIN



SJ1391 (WR) MAIN

Central Junction Box (P101)



SJ1391

WR,0.5D,3040

C2025-1

Sensor-Adaptive-cruise control (T350)

 
Speed control module (D284)

WR,0.5D,590

C2145R-14

SJ551 (RG) FACIA

Automatic Temperature Control Module (D243)



SJ551

RG,0.5D,1085

C2239-3 C2241R-3

RG,0.5D,2375

C1465-3

Sensor-Pressure-Refrigerant (T278)

Sensor-Temperature/Humidity (T315)

 
(JAPAN ONLY)

RG,0.5D,1595

C0884-4

SJ400 (B) P.D.C. REAR

Parking aid control module (D184)



C0876-3 C2003-3

B,0.5D,720


SJ400

B,0.5D,1150

C0966-3

Parking aid sensor-Outer-Rear-RH (T215)

 Parking aid sensor-Inner-Rear-LH (T218)



B,0.5D,740

C0965-3

Parking aid sensor-Inner-Rear-RH (T217)

 
B,0.5D,480

C0963-3

Parking aid sensor-Outer-Rear-LH (T216)

SJ401 (N) P.D.C. REAR

Parking aid control module (D184)



C0876-1 C2003-1

N,0.5D,640

SJ401

N,0.5D,1230

C0966-1

Parking aid sensor-Outer-Rear-RH (T215)

Parking aid sensor-Inner-Rear-RH (T217)



N,0.5D,320

C0964-1


Parking aid sensor-Inner-Rear-LH (T218)

N,0.5D,400


C0963-1

Parking aid sensor-Outer-Rear-LH (T216)


SJ402 (N) FRONT BUMPER

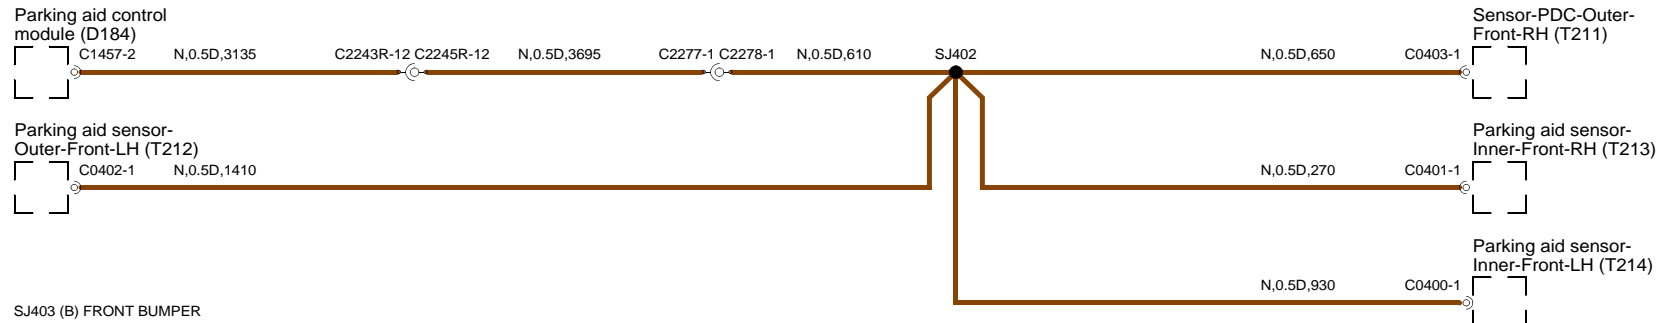



SJ403 (B) FRONT BUMPER

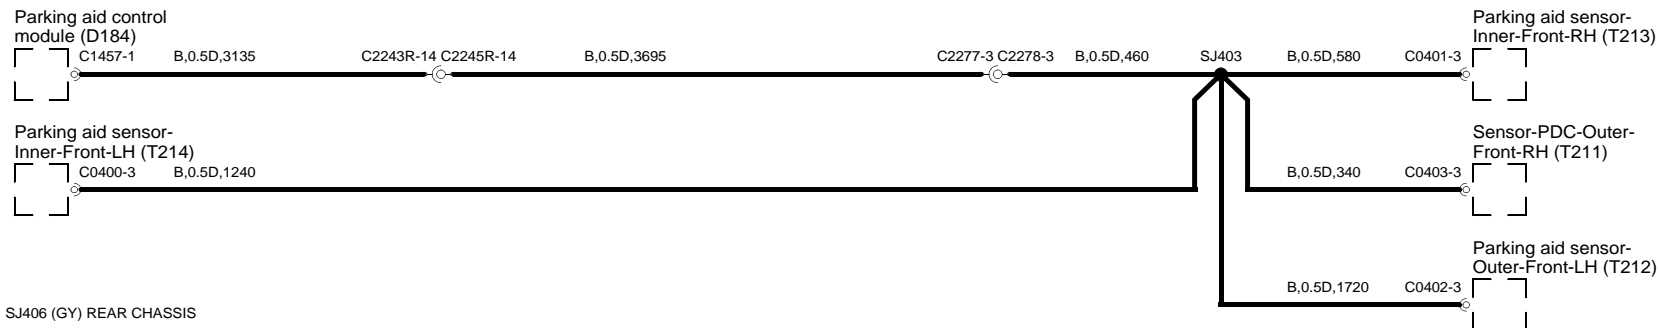



SJ406 (GY) REAR CHASSIS

 












SJ444 (NK) TRANSMISSION AUTO

  


SJ1445 (NK) ENGINE BAY

  

           
SJ1450 (GU) ENGINE BAY SJ1280 (GU) ENGINE SJ7 (WU) SJ1 (WU)



SJ1812 (NO) ENGINE BAY

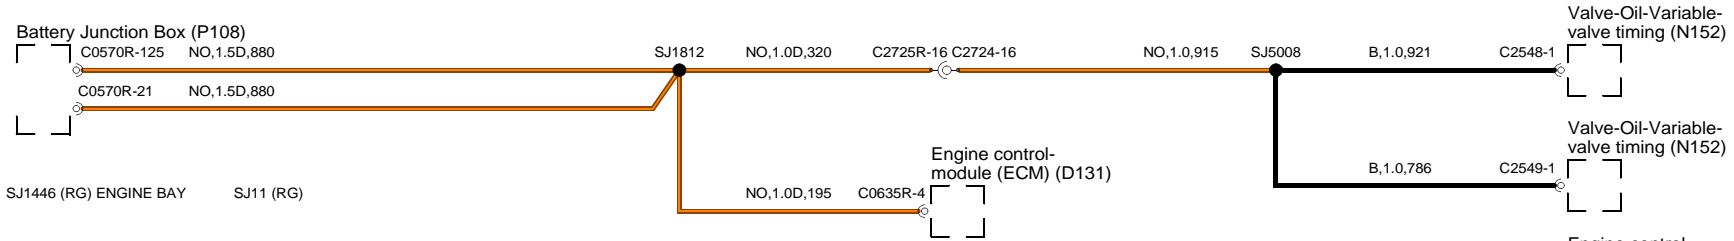


SJ1446 (RG) ENGINE BAY SJ11 (RG)

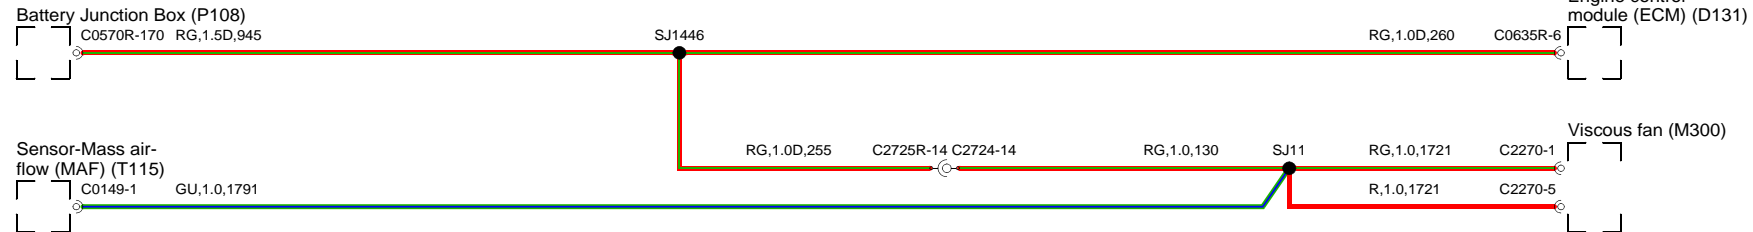


Sensor-Mass air-flow (MAF) (T115)
C0149-1 GU, 1.0, 1791

SJ5 (RU) DIESEL ENGINE

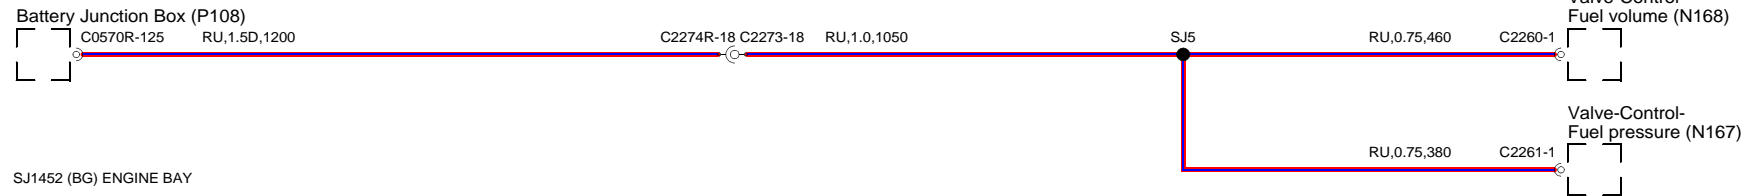

SJ1452 (BG) ENGINE BAY

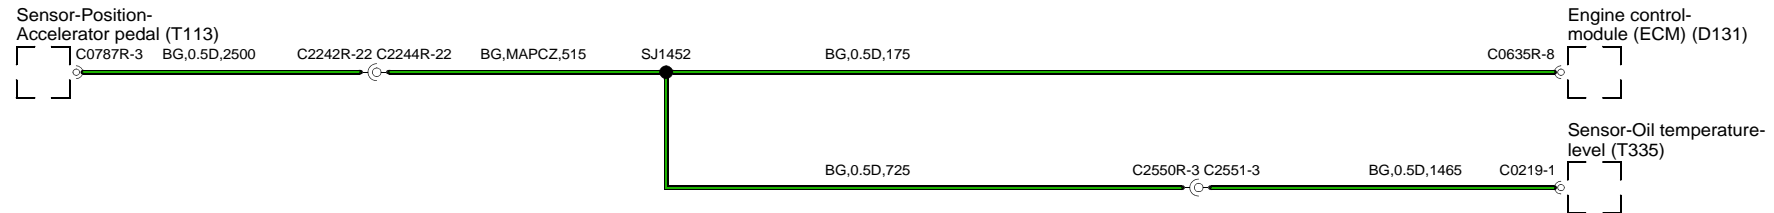

SJ1415 (WG) ENGINE BAY

Central Junction Box (P101)

C0584R-16 WG,0.5D,255

SJ1415 WG,0.5D,355

C2412R-6 C2411R-6

WG,0.5D,2915

C0961-1

Sensor-Rain-Ambient light (T328)

Motor-Wiper-Windscreen (M105)

WG,0.5D,1680

C0030R-5

SJ1479 (WR) ENGINE BAY

Battery Junction Box (P108)

C0570R-34 WR,0.5D,490

SJ1479

WR,0.5D,485

C0584R-30

Central Junction Box (P101)

Engine control-module (ECM) (D131)

WR,0.5D,495

C0872R-F3

SJ1489 (WP) ENGINE BAY

Battery Junction Box (P108)

C0570R-119 WP,2.5D,770

SJ1489

WP,2.5D,2230

C3009-1 C3010-1

WP,2.5D,3215

C0114-4

Unit-Fuel Tank (D179)

Engine control-module (ECM) (D131)

WP,0.75D,215

C0872R-G1

SJ495 (U) ICE

Audio head unit (D282)

C1354-12 U,0.5D,1520

C2640-1 C2639-1

U,0.5D,3645

SJ495

U,0.5D,1280

C2218-1

FM antenna amplifier (F213)

AM/FM diversity antenna amplifier (F212)

U,0.5D,990

C2219-1

SJ542 (PU) MAIN

Battery Junction Box (P108)

C0570R-115 PU,4.0D,1025

C2410R-2 C2409R-2

PU,4.0D,2895

SJ542

PU,2.5D,85



C2163-7

Rear differential control module (D283)


PU,2.5D,85

C2163-8

SJ550 (BG) FACIA

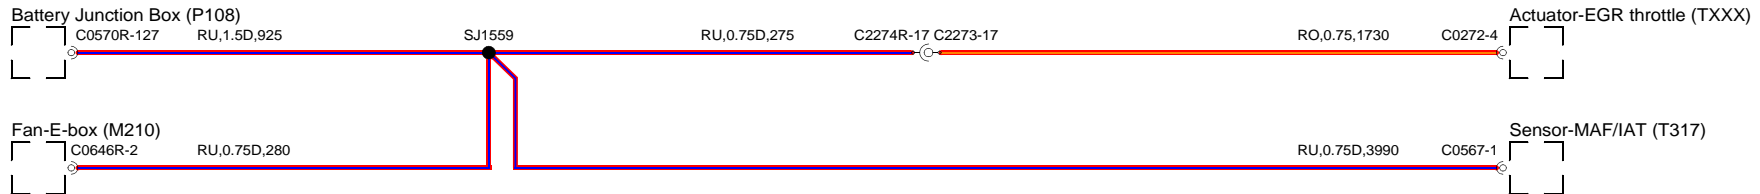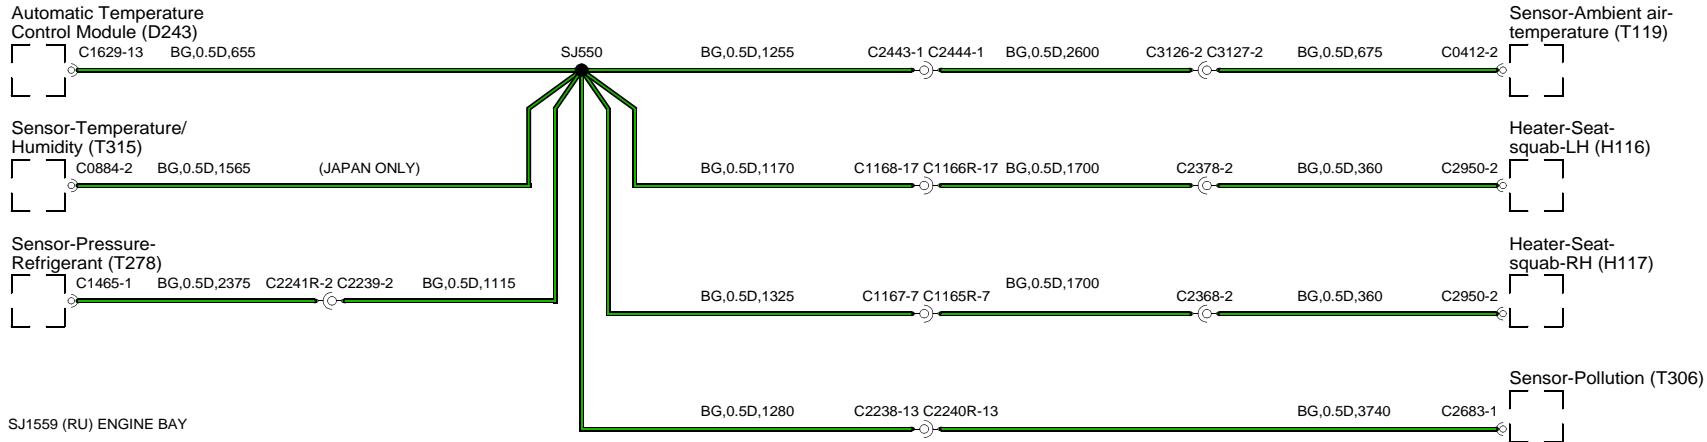

SJ570 (P) TRAILER LINK

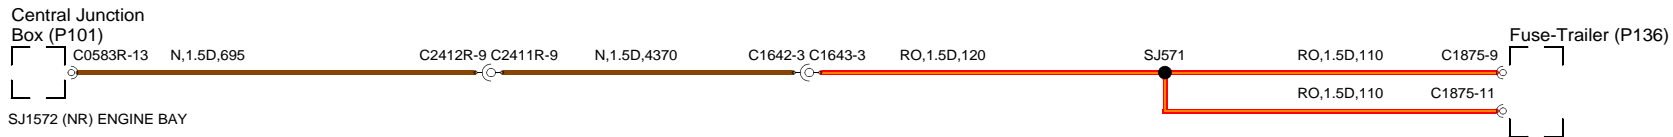

SJ1574 (LG) ENGINE BAY

Central Junction Box (P101)

C0583R-35 LG,0.5D,770

SJ1574 LG,1.5D,400 C0570R-95
 LG,0.5D,400 C0570R-72
 LG,0.5D,400 C0570R-68
 LG,0.5D,400 C0570R-25

Battery Junction Box (P108)

SJ1592 (GO) ENGINE BAY

Battery Junction Box (P108)

C0570R-34 GO,0.5D,350

SJ1592 GO,0.5D,635 C0635R-15
 GO,0.5D,580 C2365R-8 C2366B-8 GO,0.5H,1955 C0193-10

Engine control module (ECM) (D131)

Transmission control module (D123)

SJ1620 (GN) MAIN

Central Junction Box (P101)

C0586R-2 GN,0.5D,355

SJ1620 GN,0.5D,2130 C1537-8
 GN,0.5D,565 C1166R-8 C1168-8 GN,0.5D,1535 C2387-12

Tire pressure monitoring control module (D286)

Switch pack-Centre facia (S425)

SJ630 (BN) ENGINE BAY

Viscous fan (M300)

C2270-A BN,1.0D,300
 C2270-E BN,1.0D,300

SJ630 BN,1.5D,2065 C0570R-170

Battery Junction Box (P108)


SJ686 (LGW) FACIA

Battery Junction Box (P108)


C0570R-122 LGW,4.0D,1185

C2241R-9 C2239-9 LGW,2.5D,1390 SJ686 LGW,1.5D,250 C2295-2
 LGW,1.5D,250 C2295-1

Automatic Temperature Control Module (D243)

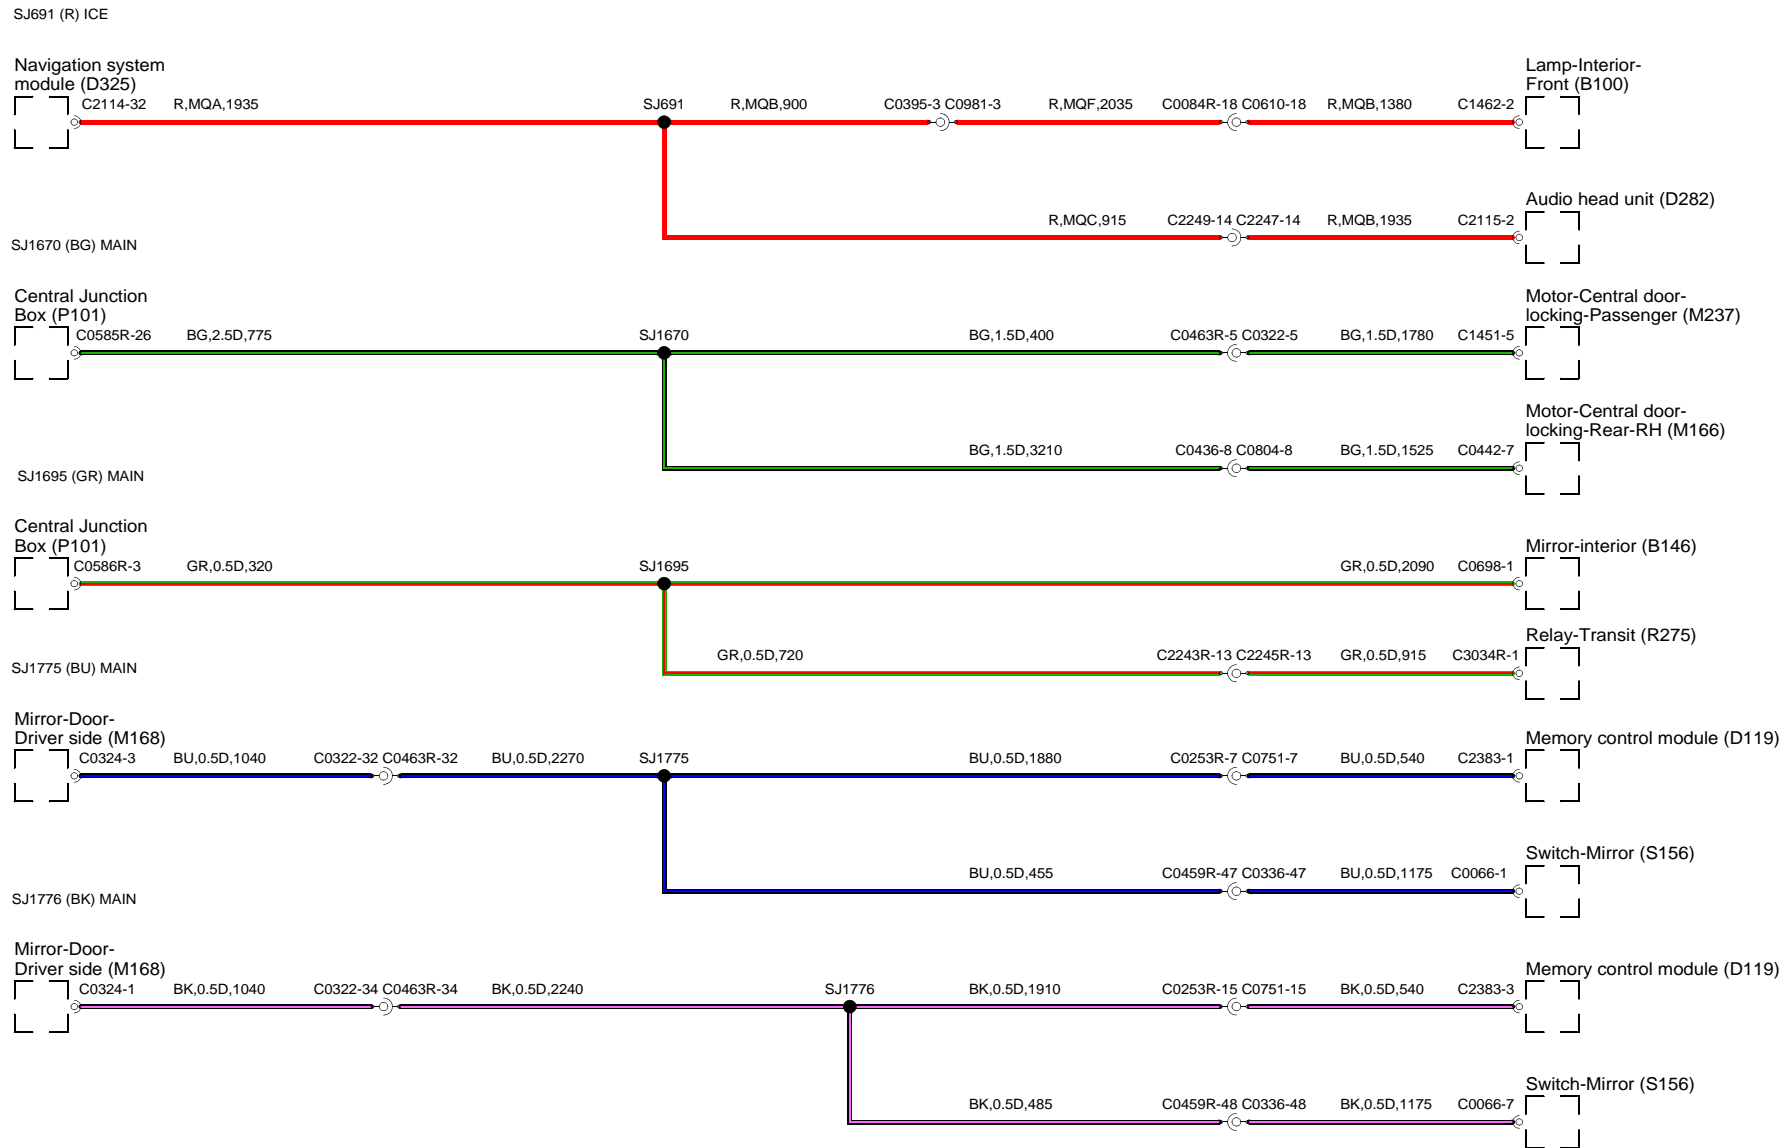

SJ695 (RW) FACIA

 

SJ695

RW,0.5D,100

C1443-2

 
Sensor-Temperature/Humidity (T315)

RW,0.5D,100

C0884-1

Sensor-Temperature/Humidity (T315)

SJ800 (UR) TRANSMISSION



SJ800

UR,0.5H,1160

C2169-1

 
Sensor-Selector-position (T304)

UR,0.5H,345

C0675-6

Sensor-Gearbox-position (T190)

SJ801 (RY) TRANSMISSION



SJ801

RY,0.5H,1010

C2169-3


Sensor-Selector-position (T304)

RY,0.5H,195

C0675-5

Sensor-Gearbox-position (T190)


SJ802 (N) TRANSMISSION SJ803 (N) TRANSMISSION
 SJ1802 (N) TRANSMISSION SJ1803 (N) TRANSMISSION
 SJ2802 (N) TRANSMISSION SJ2803 (N) TRANSMISSION

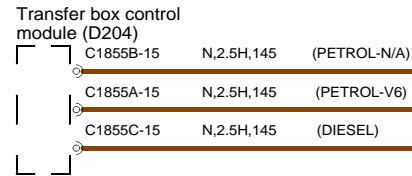

C2167-1

Motor-Transfer box (M276)


SJ805 (R) TRANSMISSION SJ804 (R) TRANSMISSION
 SJ1805 (R) TRANSMISSION SJ2804 (R) TRANSMISSION
 SJ2805 (R) TRANSMISSION SJ1804 (R) TRANSMISSION

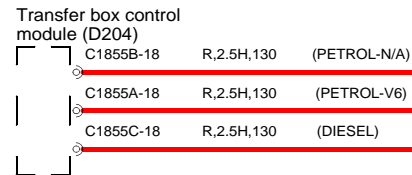


C2167-8

Motor-Transfer box (M276)


SJ901 (YB) ENGINE BAY

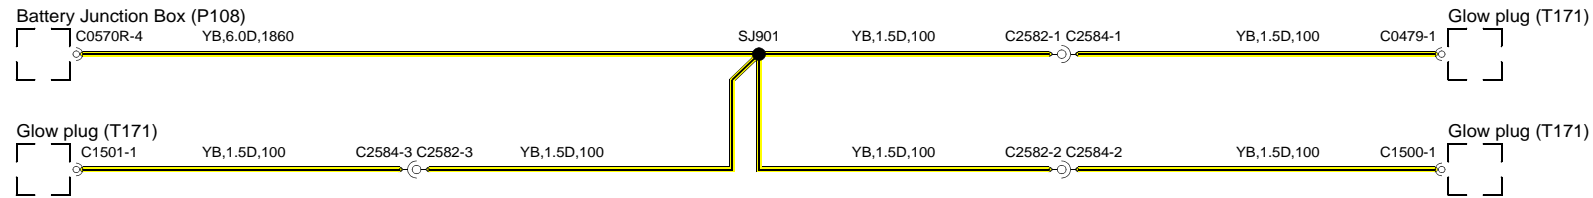


SJ902 (YB) ENGINE BAY

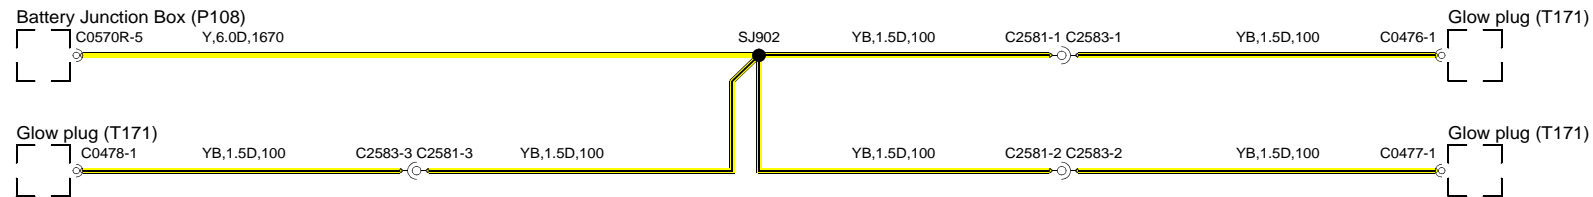


SJ1923 (PU) ENGINE BAY

 


SJ1970 (R) ENGINE BAY SJ971 (R) MAIN

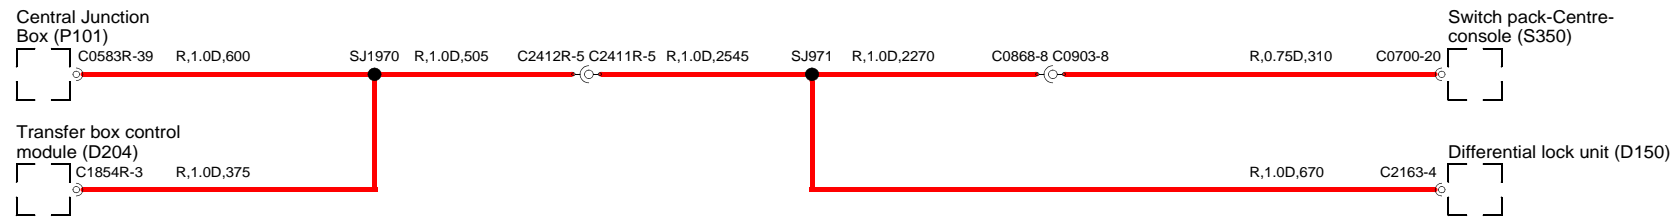


SJ1991 (YG) MAIN

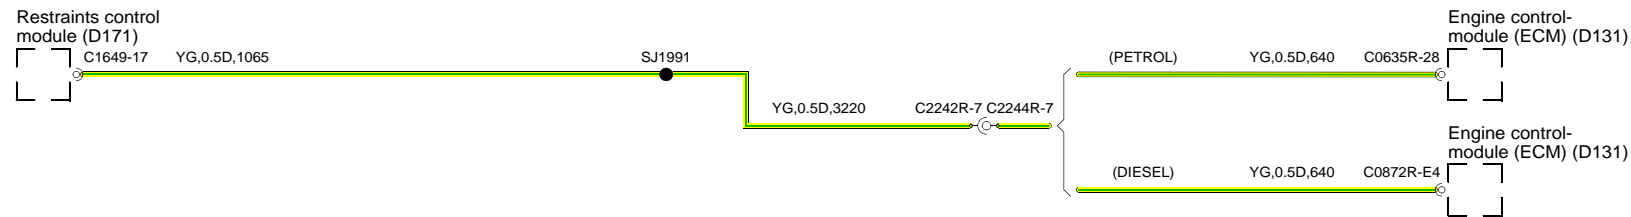


SJ1995 (RB) ENGINE BAY

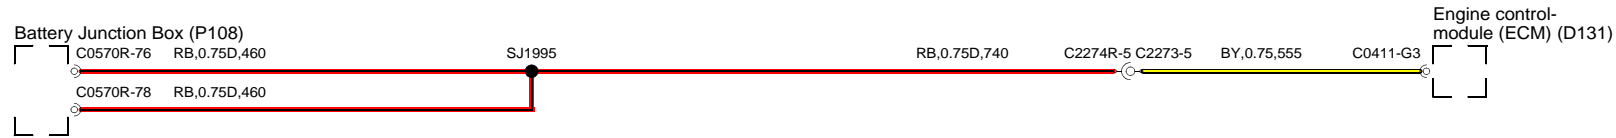


SJ998 (R) SELECTOR LINK

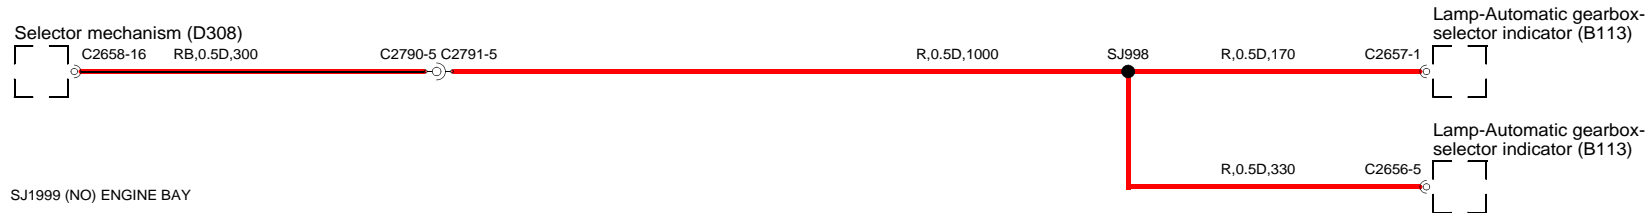

SJ1999 (NO) ENGINE BAY

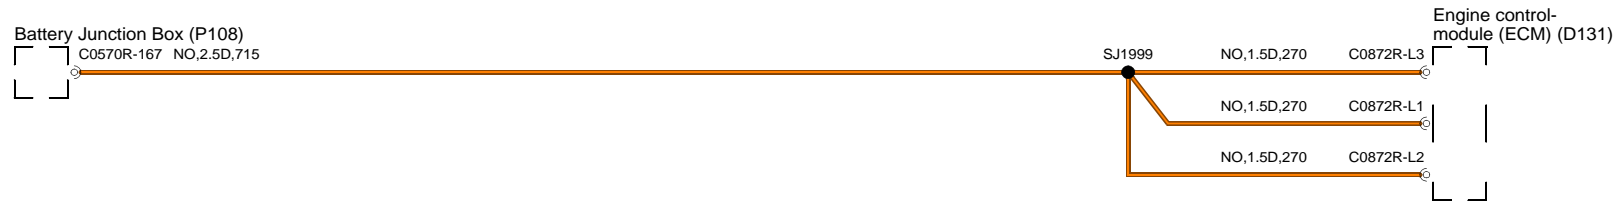

SJ112 (LGW) REAR SEAT LH SJ111 (LGW) REAR SEAT LH

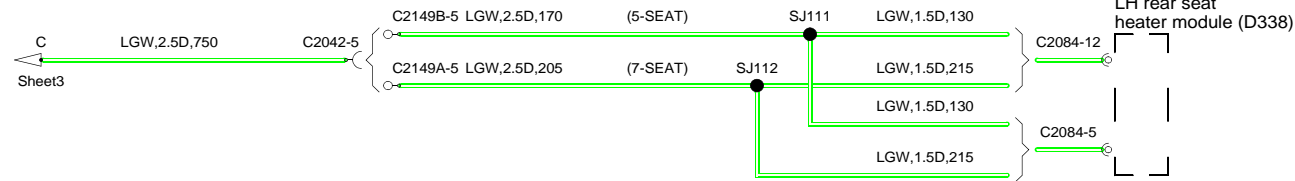

SJ112 (LGW) REAR SEAT RH SJ111 (LGW) REAR SEAT RH

